

DES-1721^{Q&As}

Specialist - Implementation Engineer-SC Series Exam

Pass EMC DES-1721 Exam with 100% Guarantee

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.pass2lead.com/des-1721.html>

100% Passing Guarantee
100% Money Back Assurance

Following Questions and Answers are all new published by EMC
Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers



QUESTION 1

A customer wants to have the SED feature enabled through Dell Storage Manager (DSM) 2016 R2. How is encryption enabled on the SED?

- A. SED feature must be licensed.
- B. External KMS is required and must be activated during installation of the array.
- C. SED feature uses a dedicated ASIC in each controller and can be enabled at any time.
- D. SED encrypts data by default.

Correct Answer: A

Reference: https://i.dell.com/sites/csdocuments/Shared-Content_data-Sheets_Documents/ar/dz/ESG-TechWP-BP-Securing-Compellent-Storage-Center.pdf

QUESTION 2

DRAG DROP

What is the correct sequence of steps to enable MPIO on a Microsoft Windows 2012 Server?

Select and Place:

Select "Server Roles" without selecting a role to install	STEP 1
Launch Server Manager and select "Add Roles and Features"	STEP 2
Select "Multipath I/O" within the Features window	STEP 3
Confirm the settings and click "Install"	STEP 4
Select "Role-based" or "Feature-based" installation	STEP 5

Correct Answer:

Select "Server Roles" without selecting a role to install	Launch Server Manager and select "Add Roles and Features"
Launch Server Manager and select "Add Roles and Features"	Select "Role-based" or "Feature-based" installation
Select "Multipath I/O" within the Features window	Launch Server Manager and select "Add Roles and Features"
Confirm the settings and click "Install"	Select "Multipath I/O" within the Features window
Select "Role-based" or "Feature-based" installation	Confirm the settings and click "Install"

QUESTION 3

When installing an SC Series array, the customer indicated that they want the controller configured to provide the maximum amount of storage space. You discover that the storage controller was shipped with twelve 900 GB drives and twelve

1.8 TB drives of the same type.

Which redundancy level can be selected to provide the maximum amount of storage?

- A. Put equal size drives in their own pagepool. Change the default redundancy level for the 1.8 TB drives.
- B. Put all drives in the same tier. Keep the default redundancy level for both the 900 GB and 1.8 TB drives.
- C. Put equal size drives in their own tier. Change the default redundancy level for the 900 GB drives.
- D. Put equal size drives in their own pagepool. Keep the default redundancy level for both the 900 GB and 1.8 TB drives.

Correct Answer: C

QUESTION 4

When an RS-232 serial cable is connected between a service laptop and SC Series hardware, which parameters need to be selected?

- A. Baud Rate = 9600, Parity = None Data Bits = 8, Stop Bits =1, Flow Control = XON/XOFF
- B. Baud Rate = 115200, Parity = None Data Bits = 8, Stop Bits = 1, Flow Control = XON/XOFF
- C. Baud Rate = 115200, Parity =None Data Bits = 8, Stop Bits = 1, Flow Control = None

D. Baud Rate = 115200, Parity = Even Data Bits = 8, Stop Bits = 1, Flow Control = XON/XOFF

Correct Answer: A

QUESTION 5

You recently added a second Storage Center to your network. Both systems were added to DSM, and you can ping the iSCSI ports of the remote system. You are planning to replicate between your two systems, but you cannot get the Replication Wizard to launch.

What item is missing?

- A. Data Progression is not running on both systems
- B. Deduplication is enabled on the source system
- C. Both systems do not have a QoS setting enabled
- D. Remote Instant Replay license has not been applied

Correct Answer: B

[DES-1721 PDF Dumps](#)

[DES-1721 Study Guide](#)

[DES-1721 Braindumps](#)